

## USER GUIDE SUPPLEMENT


### Fender Passport 300 Pro Audio System



This document is designed to supplement the Passport 300 Pro User Guide found in the box with your sound system. Please refer to that document if you have any questions.

## Setup

- 1 Flip open the cabinet latches on top of the Passport and detach the speaker cabinets from the powered mixer section.

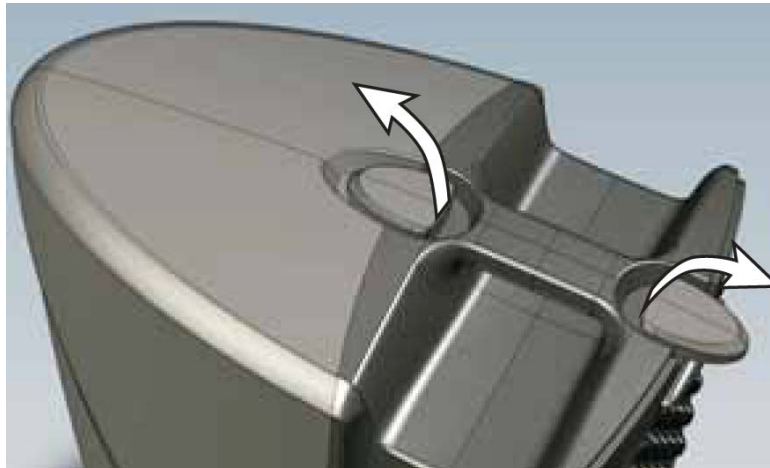

- 2 For Optimal results elevate the speaker cabinets and place the speakers far apart to maximize stereo separation. Position the mixer close to the computer so you will have easy access to the control panel.



- ③ Open the storage compartment on the rear of the mixer and remove the power cord and speaker cables.




Rear View



Front View

- ④ Plug the speaker cables into the left and right speaker jacks on the back of the mixer; then connect the corresponding left and right speakers. Make sure the power is off; then plug the supplied power cord into the power socket on the back of the mixer and the other end into a grounded AC power outlet (standard three prong plug).

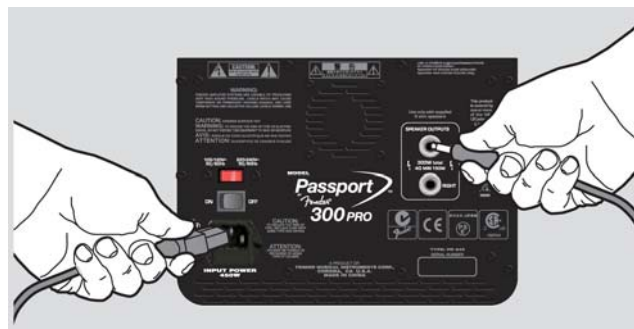

- ⑤ Connect the mixer to the computer using the HOPSports supplied audio adapter. Use the stereo channels on the right to connect the speakers to the HOPSports System, CD players, or


MP3 players. Use the mono inputs on the left to connect microphones.



While the HOPSports system can be connected to either channel 5 or 6, later instructions in this booklet will assume the HOPSports system is connected to channel 5.

6


Turn on the HOPSports computer; then switch on the Passport audio system. The power LED on the Passport should illuminate green.

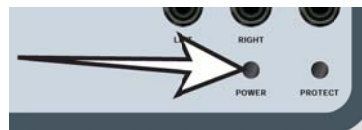

The protect LED will illuminate briefly during the power up sequence.



It is recommended to rotate the “master volume”, all “channel level” and all “reverb” knobs fully counter clockwise BEFORE powering up the system. This will protect the speakers from unintentionally high volume levels when the system is turned on.

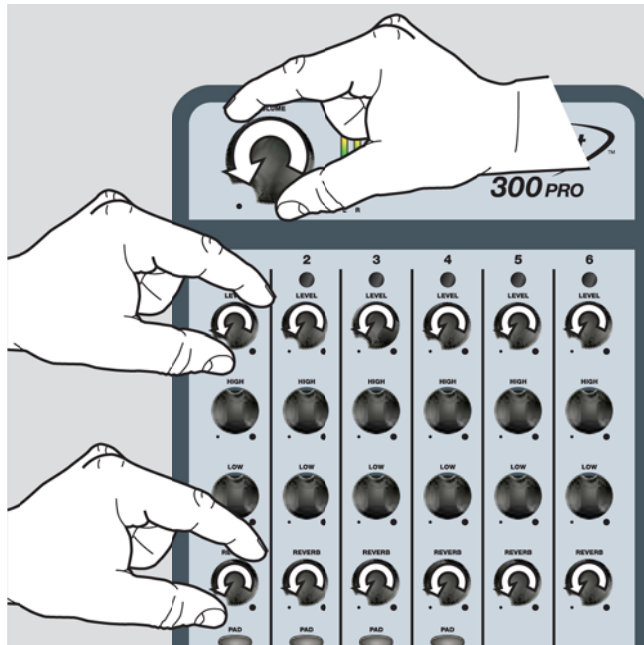


**7**

Adjust volume levels until audio can be heard by everyone.



Turn the master volume knob up to ¼ volume

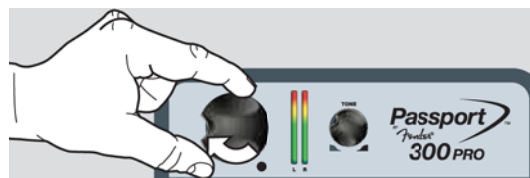

Start a video on the HOPSports system



Slowly turn the level knob for channel 5 clockwise. The LED above the knob should be green. If it turns yellow, rotate the level knob counter clockwise and increase the volume on the computer, or turn the master volume knob clockwise. Please note the level knob and LED for channel one are pointed to in the image below, you will be adjusting the knobs under channel 5.

